 


IMPORTANT INSTRUCTIONS

A) TOO LONG LAZY LINE

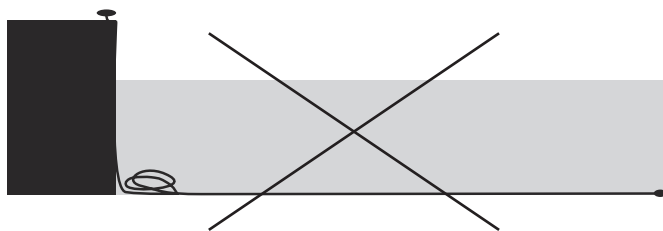


IMPORTANT!

B) OPTIMAL LENGTH OF LAZY LINE



ADJUST LENGTH OF LAZY LINE BEFORE USE

HOW TO CONNECT GHOOK WITH TELESCOPIC HOOK AT BEGINNING OF MOORING

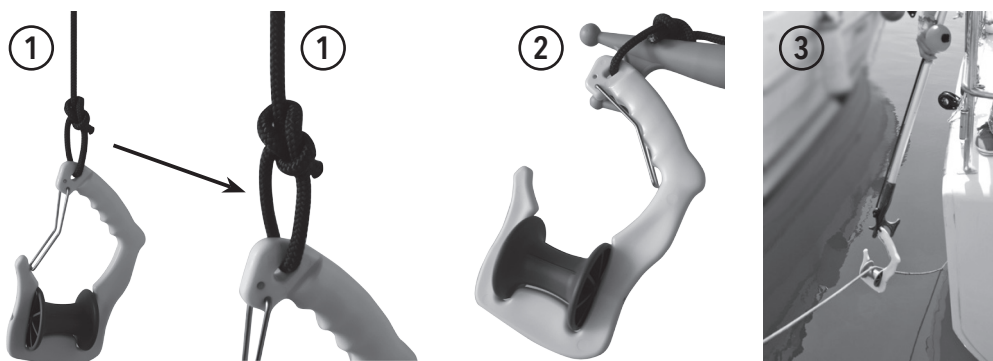

*boatasy*TM GHOOK



User instruction manual

User Instruction Manual for the BOATASY GHOOK

INSTRUCTIONS FOR USE

This instruction manual is an integral part of the Boatasy GHOOK. It should be stored in a safe place and kept in an easily accessible place in the vicinity of the device. Before operating the Boatasy GHOOK or carrying out any maintenance operations, it is recommended that users carefully read the information and warnings contained herein, which are required for the use of the device and its optional equipment in the most correct and safe way.

WARNINGS

Use of the product comes at your own risk. Follow these general warnings and instructions to avoid accidents, damage to your boat or vessel, personal injury or death. Alterations or misuse of this equipment or failure to follow these instructions could lead to the damaging of your boat or vessel, personal injury or death. This product is designed to be used as device, which assist in the transfer of the lazy line (mooring line) during mooring, berthing operations on your boat or vessel and may be used for these purposes only. Do not use it for any other purposes. Children and young people under the age of 18 as well as pregnant women, people with mentally, sensory or physical disabilities should not use this product. This equipment must be used by persons trained and competent in its correct application and safe use. The Boatasy GHOOK is designed for manual use only. It is necessary to wear protective gloves during mooring and berthing operations. It is recommended to have sailing footwear or other sailing clothes during berthing and mooring operations. Before beginning use of the Boatasy GHOOK, remove all necklaces, bracelets, bands, ropes or any other items connected to your body or clothes in order to avoid getting caught on the Boatasy GHOOK during use. Before usage, you should prepare and clean all items on the boat or vessel deck, which could impede the smooth, safe usage of the Boatasy GHOOK. Use the Boatasy GHOOK only in windless areas and under circumstances in which the boat is not moving or drifting. Use it only in cases of calm water (no waves), no currents or any other questionable circumstances (bad weather, storm, etc.), which could influence the boat or vessel and cause it to start moving or drifting. It is prohibited to use the product during abnormal conditions on board a boat. Do not use it when forces on the lazy line (mooring line), which pressurize the Boatasy GHOOK, exceed 12 kgs (about 120 N). Do not test and pressurize the Boatasy GHOOK with additional weights. In the case that the lifting force exceeds 12 kgs (about 120 N), the product may break in 2 pieces causing the mooring line (lazy line) to fall into the water and consequently delay the mooring operation, cause the drifting of the boat, collision, injuries, etc. Do not use it when the width or diameter of the mooring line is lower than 5 mm or exceeds 6 cm (usually on a very overgrown mooring line). Users should always be careful to check for thickness, shell or algae damage, etc. as well as obstacles on the mooring line (lazy line), which could interfere with its normal functioning or transmission or even block it. The stoppages could cause the mooring or berthing time to increase. The consequences of stoppages may include the drifting of the boat or vessel and consequential collisions, possible damage, injuries and death. In case of stoppage of the Boatasy GHOOK connected to the lazy line (mooring line), the user should react immediately and only when all circumstances are safe, should he immediately proceed with the transfer of the mooring line (lazy line) in the traditional way (manually). It is important that the mooring and berthing operation is carried out safely, quickly and always in accordance with boat's captain. It is very important that checks be run, both before and during each use of the Boatasy GHOOK, to verify the safety and appropriateness of the transfer of the mooring line (lazy line). Do not use it in the case of a corroded, sharp, unfit mooring line (lazy line), which could damage the device. Inspect the Boatasy GHOOK before each use. If the product is damaged, discontinue use! Failure to perform inspection steps preceding each use of the Boatasy GHOOK and its supporting towing rope could lead to problems during the berthing process, possibly resulting in serious injury and other accidents. A competent person must inspect their equipment frequently, at least every 12 months and always before use. If damage is detected, please return the product to its manufacturer for repair or replacement. Any attempt to modify or repair equipment by the user will void the warranty. The Boatasy GHOOK itself does not float. The Boatasy GHOOK can be connected to the rope extension only in suitable conditions, which the user should verify before each mooring and / or berthing operation. The rope extension should be connected to the Boatasy GHOOK via the optional rope extension opening (see picture nr.1, elem. 5). The rope extension standard length is 120 cm and its diameter is 6 mm. Only unsharp, clean and suitable ropes made of resistant, non-expandable material (nylon or similar material) may be used. It is important to be very careful with boat maneuvers in case the Boatasy GHOOK and rope extension falls into the water. The captain should always be careful and should avoid contact of the rope extension with the boat's rudder, keel, shaft or propeller in order to avoid it wrapping around them and consequently causing the stoppage of the engine or other issues. It is very important that user not connect the Boatasy GHOOK or rope extension connected to the Boatasy GHOOK to his / her hand, arm or any other part of his / her body (see picture nr. 2)! During its use, the user should grip the Boatasy GHOOK properly by the ergonomic handle only (see picture nr.6) or by extension rope (see picture nr.7). It is important not to insert hands in the space between the ergonomic handle and plastic wheel (see picture 3a and 3b). Do not insert fingers into the latch (see picture nr.8). The user must always have the option to remove the Boatasy GHOOK away from the lazy line (mooring line) if the forces caused by the mooring line (lazy line) suddenly increase; consequently, such cases present the possibility for accidents, damage to your boat or vessel, personal injury or death. Do not use the Boatasy GHOOK with the long rope extension going through the swivel. It is important that the connection of the mooring rope (lazy line) into the Boatasy GHOOK is only carried out when the mooring line has no force upon it and is in a place with no obstacles around it (see picture nr. 4). Disconnection of the Boatasy GHOOK from the mooring line (lazy line) should be carried out with caution and in a place with no obstacles around it. Do not connect or disconnect it inside boat rails, inside or in the vicinity of any obstacles (holders for bimini top, solar panels, wind turbines, etc.). Before each use, prepare the Boatasy GHOOK in such a way that the safety latch is open. The connection or disconnection of the lazy line (mooring line) into or out of the Boatasy GHOOK should be done carefully and quickly. Both hands should be used during the process of connecting or disconnecting the Boatasy GHOOK to or from the lazy line (mooring line). One hand should grip the Boatasy GHOOK by its ergonomic handle correctly (nr.5) and the other hand should be gripping the lazy line (mooring line) or standard removable hook connected to it by a distance of (min.) 20 cm from the Boatasy GHOOK in order to avoid possible injuries. The user must be careful to hold the Boatasy GHOOK properly and to not insert hands or body parts into the GHOOK when it is in use or when the mooring line (lazy line) is inserted. In case of any accident during its usage, users should immediately consult a doctor. Do not use the Boatasy GHOOK if you are in doubt on its correct use. If you are not certain about its usage, contact the producer for more information.

LIMITED LIABILITY

It is the responsibility of the purchaser and user of the Boatasy GHOOK to assure that they are familiar with the instructions and are properly trained. The user must use it in a responsible way and must be aware of the operating characteristics, application limits and consequences of its improper use. The manufacturer is not liable for damage by the Boatasy GHOOK or its optional equipment if such damage is caused by a failure to heed the user instruction manual, improper use, by an incorrectly performed repair or replacement of spare parts with non-original components, repairs not carried out by the customer service Centre or by a trained technician authorized in writing by the manufacturer himself. The above instructions also apply to components and accessories.

CONDITIONS OF USE

This product could be used as an independent device, which should only be connected to the mooring line (lazy line) when necessary, during the transfer of the mooring line under safe conditions. The user could use it directly (via the ergonomic handle (see picture nr.1, elem. 4) or connect it to an optional rope extension with a floating buoy. The optional rope extension should be connected through the optional rope extension opening (see picture nr.1, elem. 5). The procedure of using the Boatasy GHOOK: open the safety latch and place the mooring line (lazy line) on the rotating wheel (see picture nr.1, elem. 2), walk along the boat in order to bring the rope into vicinity to the chosen bit, take the rope out of the Boatasy GHOOK and adjust it to the bit. Please read all WARNINGS included in the User Instruction Manual carefully.

AFTER USE

Cleaning the product is recommended after usage with fresh water and drying it with a dry cloth. Do not clean it with solvents, acids, flammable or explosive liquids, corrosive liquids, disinfectants or impregnating solutions. Keep the Boatasy away from heat sources, do not leave it exposed to direct sunlight and frost after use. It is recommended that after usage, it should be returned to its original safe, storage place (closed, non UV exposed, dry, clean location where the temperature is between 5°-40°C).

TECHNICAL DATA

The product should only be used when the maximum force produced by the lazy line (mooring line) does not exceed 12 kgs (about 120 N). Maximum operating temperature: from 1°C to 45°C.

WARRANTY

The Boatasy GHOOK is covered by legal warranty for 12 months from the date of purchase. The warranty covers all defects due to bad workmanship or poor material used. The product, at the discretion of the manufacturer, will be replaced or repaired free of charge only if it has been used properly, in accordance with the instructions for use, and without having been tampered with. The product must be accompanied by proof of purchase. The warranty does not cover labour, compensation for a resulting inactivity period and cost for transport. This warranty does not cover parts subject to normal wear. Any maintenance operation carried out during the warranty period does not extend in any case to its period of application. This warranty was created by Morska pot d.o.o. with the original purchaser of the product and does not extend to any third parties. The rights of the original purchaser under this warranty may not be assigned or otherwise transferred to any third party. In no case shall Morska pot d.o.o., our directors, owners, officers, employees, affiliates, agents, contractors, interns, suppliers, service providers or licensors be liable for any injury, loss, claim, or any direct, indirect, incidental, punitive, special, or consequential damages of any kind, including, without limitation lost profits, lost revenue, lost savings, loss of data, replacement costs, or any similar damages, whether based in contract, tort (including negligence), strict liability or otherwise, arising from your use of any of the service or any products procured using the service, or for any other claim related in any way to your use of the service or any product, including, but not limited to, any errors or omissions in any content, or any loss or damage of any kind incurred as a result of the use of the service or any content (or product) posted, transmitted, or otherwise made available via the service, even if advised of their possibility. Because some states or jurisdictions do not allow the exclusion or the limitation of liability for consequential or incidental damages, in such states or jurisdictions, our liability shall be limited to the maximum extent permitted by law. You agree to indemnify, defend and hold Morska pot d.o.o. and our parent company, owners, subsidiaries, affiliates, partners, officers, directors, agents, contractors, licensors, service providers, subcontractors, suppliers, interns and employees, harmless of any claim or demand, including reasonable attorneys' fees, made by any third-party due to or arising from your breach of these Terms of Service or the documents they incorporate by reference, or your violation of any law or the rights of a third-party. Online warranty registration. Registering this product online at <https://boatasy.com/product-registration/> is critical to receive product updates or any recall information.

IMPORTANT

If you have questions concerning the use, care, or suitability of this equipment for your application, contact Morska pot d.o.o.. Please read these instructions carefully before using the equipment. This manual may be modified without notice. See boatasy.com/manuals/ for updated versions.


For further information, please visit boatasy.com.



Pic. 1

Parts identification

1. G-shaped frame
2. Rotating wheel
3. Safety latch
4. Ergonomic handle
5. Opening for optional rope extension

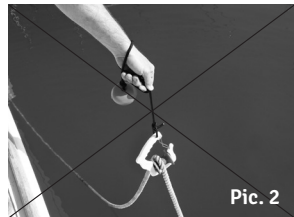


Pic. 2




Pic. 3a



Pic. 3b

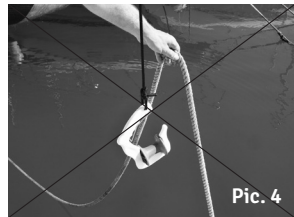

Pic. 4

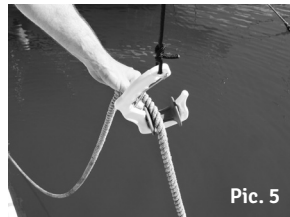


Pic. 5



Pic. 6



Pic. 7

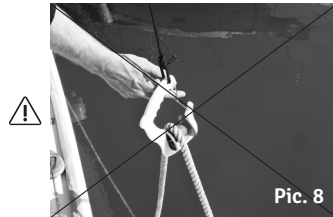

Pic. 8



Read carefully the user manual.



Do not leave the product exposed to direct sun, UV and heat source.




Use hands protection.



Do not clean with gasoline, diesel, solvents, oils.



Do not leave the product exposed to frost.

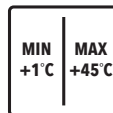

Use the product only between +1°C and +45°C.